
EXPLODED DIAGRAM - PUMP

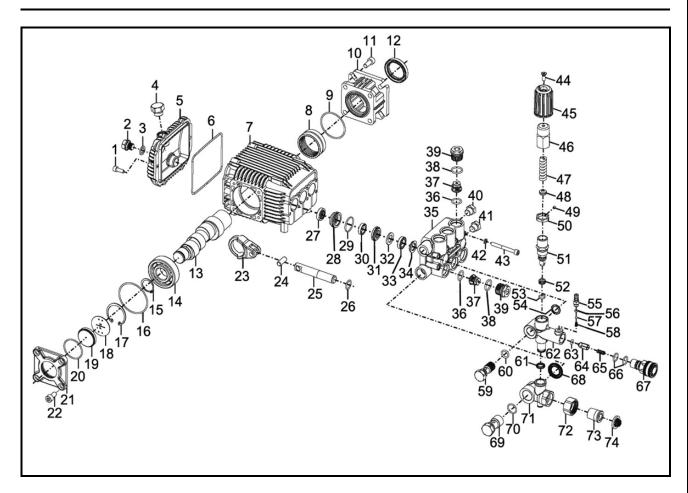

PARTS LIST- PUMP


1	Bolt, (Crankcase Cover) M6 x16
2	Oil Drain Plug
3	O-Ring, Oil Drain Plug 14.2 x 1.9
4	Vented Oil Cap
5	Crankcase Cover
6	Gasket, (Crankcase Cover),
	103 x 83 x 2.65
7	Crankcase
8	Needle Bearing
9	O-Ring, Flange 51.8 x 2.2
10	Flange
11	Bolt, (Flange) 51.8 x 2.2
12	Oil Seal, (Flange)
13	Crankshaft

14	Ball Bearing
15	Scrap Ring
16	O-Ring, (Crankshaft Cover)
	55.25 x 2.62
17	Retain Ring
18	Oil Level Plate
19	Oil Sight Glass
20	O-Ring, (Oil Sight Glass) 38 x 1.8
21	Crankshaft Cover
22	Bolt, (Crankshaft Cover) M8 x 16
23	Connecting Rod
24	Pin
25	Ceramic Coated Plunger
26	O-Ring, 15

27	Oil Seal, Plunger
28	Location Ring
29	O-Ring, (Locating Ring) 26.7 x 1.78
30	Low Pressure Water Seal
31	Compression Ring
32	Compression Flake
33	High Pressure Water Seal
34	Supporting Ring
35	Manifold
36	O-Ring, (Checking Valve) 15.54 x 2.62
37	Checking Valve Assembly
38	O-Ring, Valve Cap 18 x 2.4
39	Checking Valve Cap
40	Outlet Plug, Manifold
41	Inlet Plug, Manifold & Thermal Relief Valve
42	Washer, (Manifold)
42	
	Washer, (Manifold)
43	Washer, (Manifold) Bolt, (Manifold) M6 x 55
43	Washer, (Manifold) Bolt, (Manifold) M6 x 55 Screw, (Knob Cap) M6 x 10
43 44 45	Washer, (Manifold) Bolt, (Manifold) M6 x 55 Screw, (Knob Cap) M6 x 10 Plastic Knob Cap
43 44 45 46	Washer, (Manifold) Bolt, (Manifold) M6 x 55 Screw, (Knob Cap) M6 x 10 Plastic Knob Cap Pressure Adjusting Knob
43 44 45 46 47	Washer, (Manifold) Bolt, (Manifold) M6 x 55 Screw, (Knob Cap) M6 x 10 Plastic Knob Cap Pressure Adjusting Knob Pressure Adjusting Spring
43 44 45 46 47 48	Washer, (Manifold) Bolt, (Manifold) M6 x 55 Screw, (Knob Cap) M6 x 10 Plastic Knob Cap Pressure Adjusting Knob Pressure Adjusting Spring Spring Seat

	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
52	Valve Seat
53	O-Ring, (Valve Seat)9.25 x 1.78
54	Gasket, (Unloader Valve
	Housing) 18 x 2.4
55	Detergent Injector Fitting
56	O-Ring, Injector Fitting 4.47 x 1.78
57	Ball, (Injector Fitting)
58	Spring, (Injector Fitting)
59	Water Outlet Banjo Bolt
60	O-Ring, (Outlet Banjo Bolt) 12.2 x 2.4
61	O-Ring, (Unloader Valve Housing) 11.3 x 2.4
62	Unloader Valve Housing
63	O-Ring, (Outlet Checking
	Valve) 4.2 x 2.4
64	Outlet Checking Valve
65	Spring, Outlet Checking Valve
66	O-Ring, Outlet Fitting 14 x 1.9
67	Quick Disconnect Outlet Fitting
68	Gasket, Bypass Housing
69	Water Inlet Banjo Bolt
70	O-Ring, (Inlet Banjo Bolt)16.3 x 2.4
71	Bypass Housing
72	Swivel Nut, (Inlet Connector)
73	Body, (Inlet Connector)
74	Filter Washer, (Inlet Connector)

EXPLODED DIAGRAM - GEARBOX

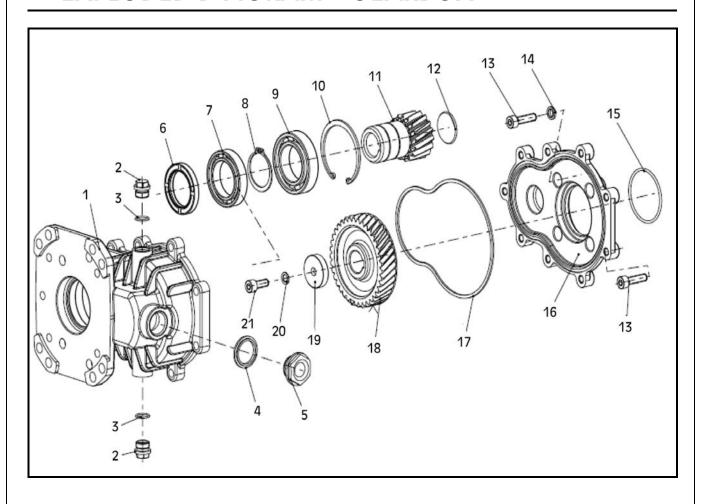

PARTS LIST- GEARBOX

1	Gearbox Case
2	Oil Plug
3	O Ring 14.2 x 1.9
4	Gasket, Oil Gauge
5	Sight Gauge
6	Oil Seal
7	Ball Bearing 61908
8	Snap Ring D40
9	Ball Bearing 6008
10	Snap Ring D68
11	Engine Gear

12	Blocking Flake
13	Bolt M8 x 30
14	Combine Washer
15	O Ring 55.25 x 2.62
16	Gearbox Cover
17	Gasket Cover
18	Pump Gear
19	Ring
20	Washer D8
21	Bolt M8 x 20